

1 Getting Started




Getting Started

Section 1

1-A Accessories


□ AC Adaptor.....one

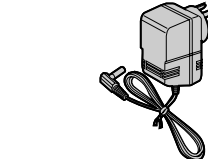


□ Telephone line Cordone
For Australia **For New Zealand**



 □ Belt Clipone




□ Wall Mounting Adaptorone

 


For Australia only

 □ Telephone Plugone



1-C Settings

1 Connect as shown.

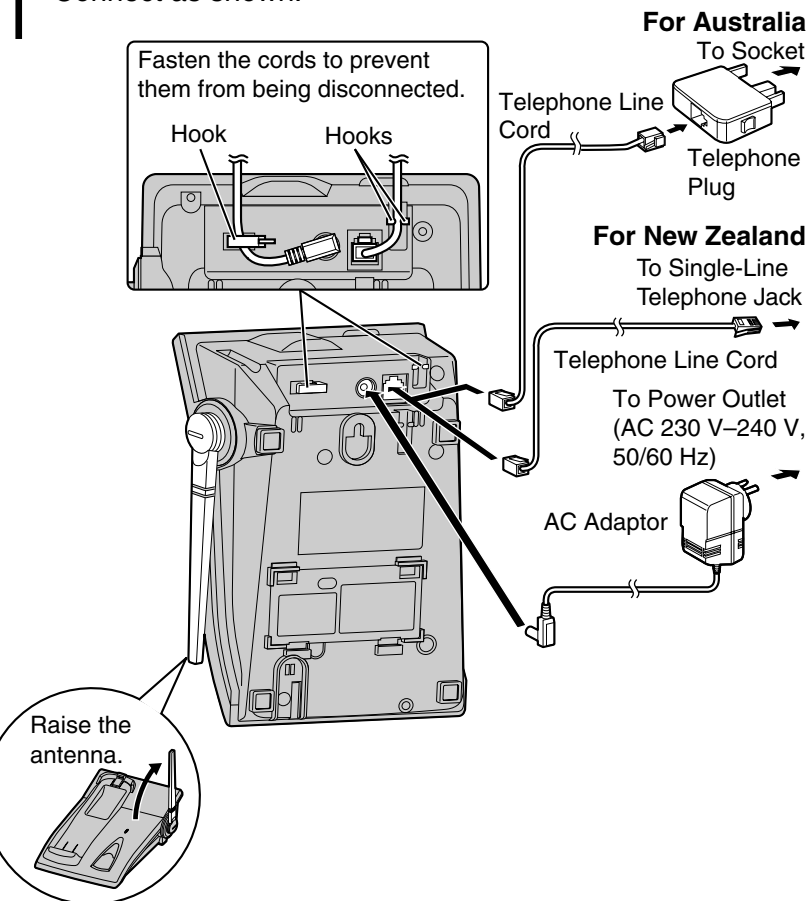


2 Raise the antenna.



3 Charge the battery for 6 hours.


- See section 6-A for more details.
- The IN USE/CHARGE indicator lights.

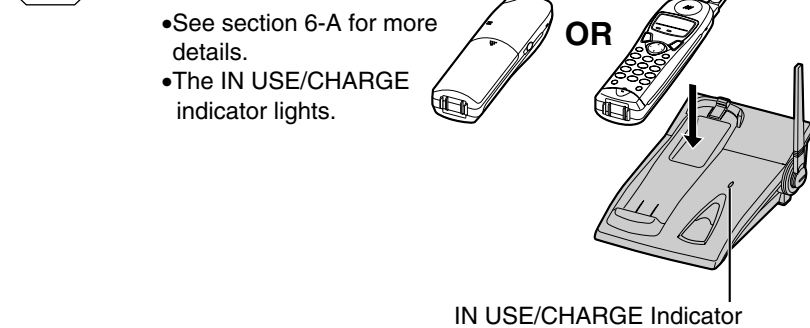


- USE ONLY WITH Panasonic AC ADAPTOR PQLV1AL.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- To connect a standard telephone on the same line, see section 6-D.
- KX-TG2501ALS and KX-TG2501NZS are not designed to be used with rotary (pulse dialling) services.

1-B Location of Controls

Handset

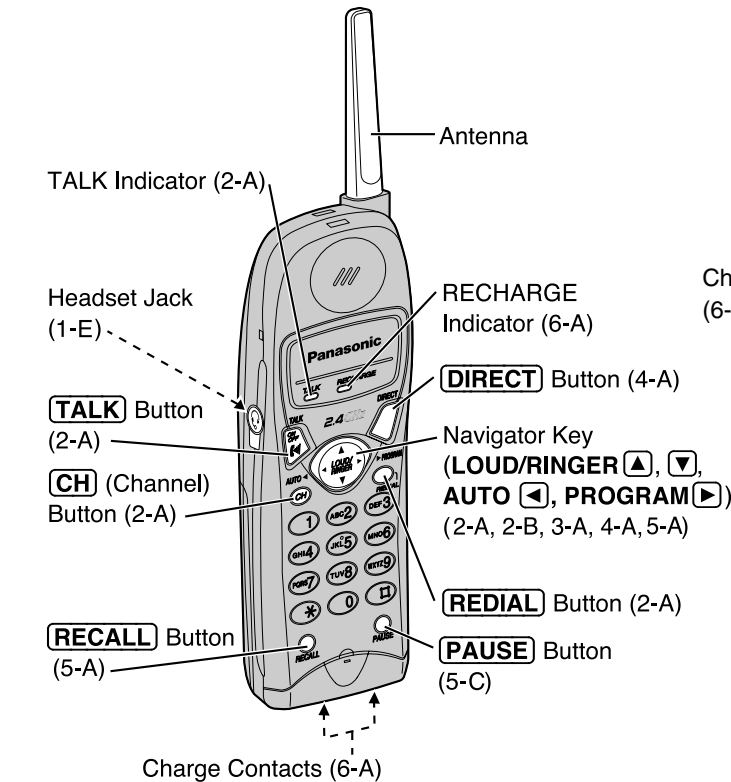


Base unit

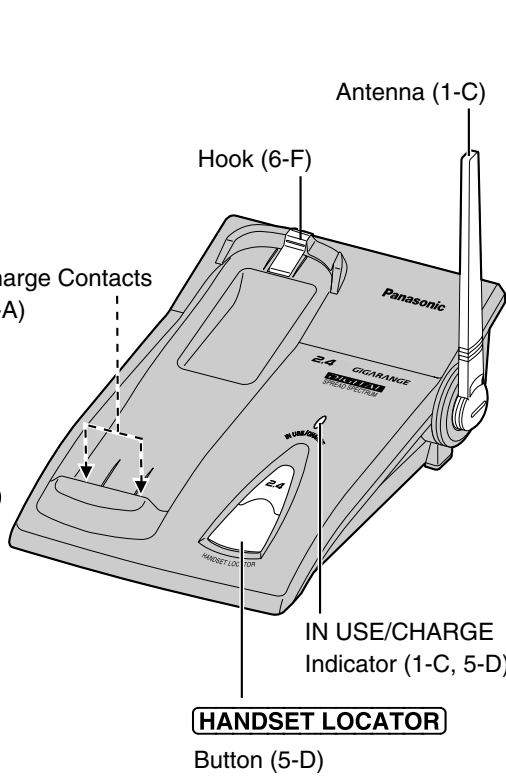


1-D Belt Clip

You can hang the handset on your belt or pocket using the belt clip.

To attach the belt clip

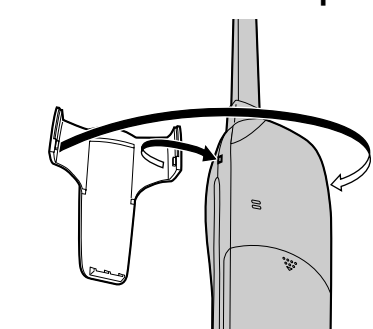

To remove the belt clip

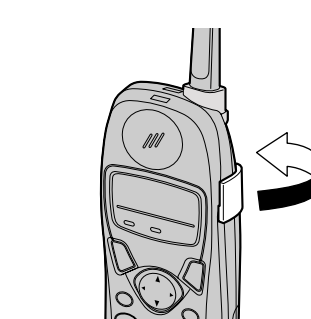


1-E Optional Headset

Plugging an optional headset into the handset allows a hands-free phone conversation. Please use only the Panasonic KX-TCA88AL headset.

Connecting the optional headset to the handset

Open the headset jack cover, and connect the optional headset to the headset jack as shown.

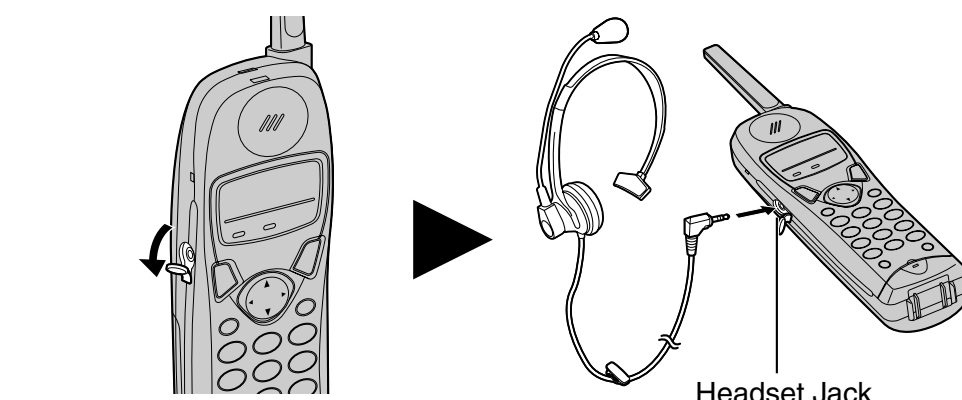

When the optional headset is connected to the handset, make sure to use the headset to talk with the caller. If you want to have a normal cordless phone conversation, disconnect the headset.

2 Making/Answering Calls

Section 2

2-A Making Calls

1 Press [TALK].
•The TALK indicator lights.
•If an alarm tone sounds, see 6-E.

2 Dial a phone number.

3 To hang up, press [TALK] or place the handset on the base unit.
•The indicator light goes out.

To redial the last number dialled

Press [TALK] → [REDIAL].

To select the receiver volume

3 levels (HIGH, MEDIUM, LOW) are available. Press [▲] or [▼] while talking.
•Each time you press [▲] or [▼], the volume level will change.

If noise interferes with the conversation

Press [CH] to select a clearer channel or move closer to the base unit.

Lighted handset keypad

The handset dialling buttons will light when you press a button or lift the handset off the base unit, and flash when a call is received. The lights will go out a few seconds after pressing a button, lifting the handset or answering a call.

2-B Answering Calls

If the handset is off the base unit, press [TALK].

- You can also answer a call by pressing any dialling button [0] to [9], [*] or [#] (— Any Key Talk).

OR

If on the base unit, just lift up.

Selecting the ringer volume

The TALK indicator light must be off.

- To select HIGH (preset) or LOW, press [▲] or [▼]. Each time you press [▲] or [▼], the ringer volume will change and the selected volume will ring.
- To turn the ringer OFF, press and hold [▼] until 2 beeps sound.
- To turn the ringer ON, press [▲]. The ringer will sound at the HIGH level.
- When you replace the battery, the selected ringer volume setting will return to the factory set.

3 Speed Dialler

Section 3

3-A Storing Phone Numbers in Memory

You can store up to 10 phone numbers in the handset. The dialling buttons ([0] to [9]) function as memory stations. The TALK indicator light must be off before programming.

- 1 Press PROGRAM [▶].
•The TALK indicator flashes.
- 2 Enter a phone number up to 22 digits.
- 3 Press AUTO [◀].
- 4 Press a memory station number ([0] to [9]).
•A beep sounds.
•To store other numbers, repeat steps 1 through 4.

If you misdial

Press PROGRAM [▶] to end storing. → Start again from step 1.



To erase a stored number

Press PROGRAM [▶] → AUTO [◀] → the memory station number ([0] to [9]) for the phone number to be erased.
•A beep sounds.

•If a pause is required for dialling, press [PAUSE] where needed. Pressing [PAUSE] counts as one digit (5-C).

3-B Dialling a Stored Number

Press [TALK] → AUTO [◀] → the memory station number ([0] to [9]).

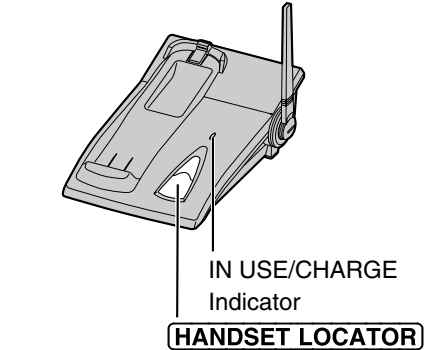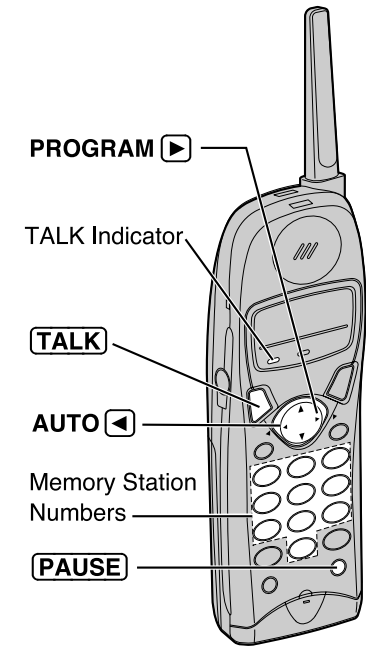


4 One-Touch Dialler

Section 4

4-A Storing a Phone Number in the DIRECT Button

You can store a phone number in the [DIRECT] button. The stored number is dialled with a one-touch operation. The TALK indicator light must be off before programming.

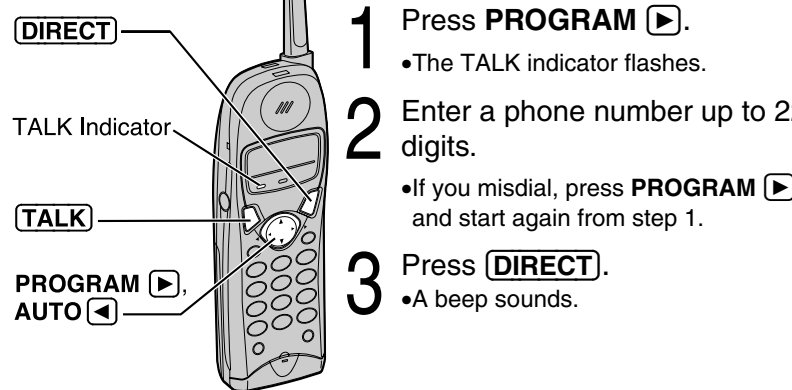

•If a pause is required for dialling, press [PAUSE] where needed. Pressing [PAUSE] counts as one digit (5-C).

4-B Dialling a Stored Number in the DIRECT Button

Press [TALK] → [DIRECT].

To erase a stored number: press PROGRAM [▶] → AUTO [◀] → [DIRECT].

5 Special Features



Special Features

Section 5

5-A RECALL Button

Pressing [RECALL] allows you to use special features of your host PBX such as call transfer or accessing a special telephone services (optional), such as call waiting.

Selecting the recall time

The recall time depends on your telephone exchange or host PBX. You can select the following recall times: "90, 100, 110, 250, 300, 400, 600 or 700 msec (milliseconds)", using the handset near the base unit. KX-TG2501ALS comes from the factory set to "100 msec". KX-TG2501NZS comes from the factory set to "600 msec".

The TALK indicator light must be off before programming.

Press PROGRAM [▶] → [Dialling button ([1] to [8])] → AUTO [◀] → [RECALL].


- | | | | |
|---------------|---------------|---------------|---------------|
| [1]: 90 msec | [2]: 100 msec | [3]: 110 msec | [4]: 250 msec |
| [5]: 300 msec | [6]: 400 msec | [7]: 600 msec | [8]: 700 msec |

- If 3 beeps sound after programming, a wrong key was pressed. Start again from the beginning.
- Users in Australia can access Telstra's "EASY CALL" service by having the recall time set at 100 msec, and then follow Telstra's "EASY CALL" instructions to operate this service.
- If the unit is connected via a PBX, PBX functions (transferring a call etc.) might not work correctly. Consult your PBX supplier for the correct setting.
- When you receive a second call during a conversation, you will hear a signal tone following the call waiting tone and the conversation will be interrupted for approximately a second. The tones are generated from the telephone company. This is not fault of the product as these events are normal.

For Call Waiting Service Users in New Zealand

Adjust the recall time to 600 ms for use with Telecom's Call Waiting Service. Press [RECALL] if you hear a call-waiting tone while talking.
•The first call is put on hold and you can answer the second call.
•To return to the first caller, press [RECALL] again.

•If a power failure occurs, the setting will return to the factory preset. Reprogram if necessary.

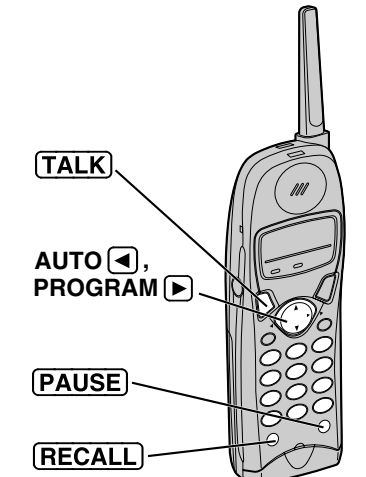

5-B Automatic Security Code Setting

Each time you place the handset on the base unit, the unit automatically selects one of more than a million security codes. These codes help prevent the unauthorized use of your telephone line by another cordless telephone user.

5-C How to Use the PAUSE Button (For PBX Line/Long Distance Calls)

We recommend you press [PAUSE] if a pause is required for dialling with a PBX or to access a long distance service.

Ex: Line access number [9] (PBX)

[9] → [PAUSE] → [Phone number]

- Pressing [PAUSE] once creates a 3.5 second pause. This prevents misdialling when you redial or dial a stored number.
- Pressing [PAUSE] more than once increases the length of the pause between numbers.

5-D Handset Locator

You can locate the handset or page the handset.

- 1 Press [HANDSET LOCATOR] on the base unit.
•The IN USE/CHARGE indicator flashes and the handset beeps for 1 minute.
- 2 To stop paging, press [HANDSET LOCATOR] again or press [TALK] twice on the handset.

6-A Battery

Recharge

When the RECHARGE indicator flashes or the unit beeps intermittently, place the handset on the base unit to recharge the battery for 6 hours.

RECHARGE Indicator

•If you DO NOT recharge the handset battery for more than 15 minutes, the RECHARGE indicator will continue to flash.

Battery information

After your Panasonic battery is fully charged:

Operation	Operating time
While in use (TALK)	near the base unit* Up to 4.5 hours
	away from the base unit Up to 3.5 hours
While not in use (Standby)	Up to 11 days

- *Within about 3 meters
- The battery operating time may vary depending on usage conditions and ambient temperature.
 - As preventative maintenance, clean the handset and the base unit charge contacts with a soft dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity. Otherwise, the battery may not charge properly.
 - If the battery is fully charged, you do not have to place the handset on the base unit until the RECHARGE indicator flashes. This will maximize the battery life.
 - The battery cannot be overcharged.


6-B Battery Replacement

If the RECHARGE indicator flashes after being fully charged, replace the battery with a new Panasonic N4HKGB00001 (P-P510) battery.

- Press the notch on the battery cover firmly and slide it as indicated by the arrow.
- Remove the old battery. Then install the new one.
 - Insert the battery plug into the connector as shown.
- Close the cover. Make sure to charge the new battery for 6 hours.

6-C Base Unit Location/Noise



Calls are transmitted between the base unit and the handset using wireless radio waves. For maximum distance and noise free operation, the recommended base unit location is:

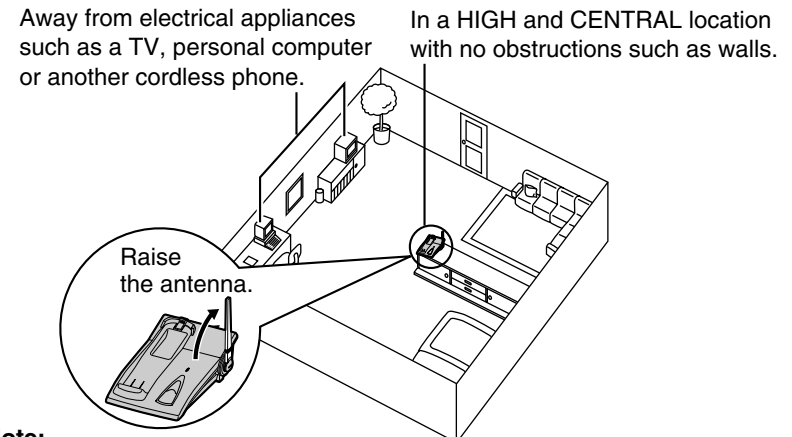

Note:
While using the handset:
— If you are near a microwave oven which is being used, noise may be heard at the receiver. Move away from the microwave oven and closer to the base unit.
— If more than one cordless phone is being used and your handset is near another cordless phone's base unit, noise may be heard. Move away from the other cordless phone's base unit and closer to your base unit.

6-D Adding Another Phone

This unit will not function during a power failure. To connect a standard telephone on the same line, use a telephone double adaptor (for Australia) or a T-adaptor (for New Zealand).

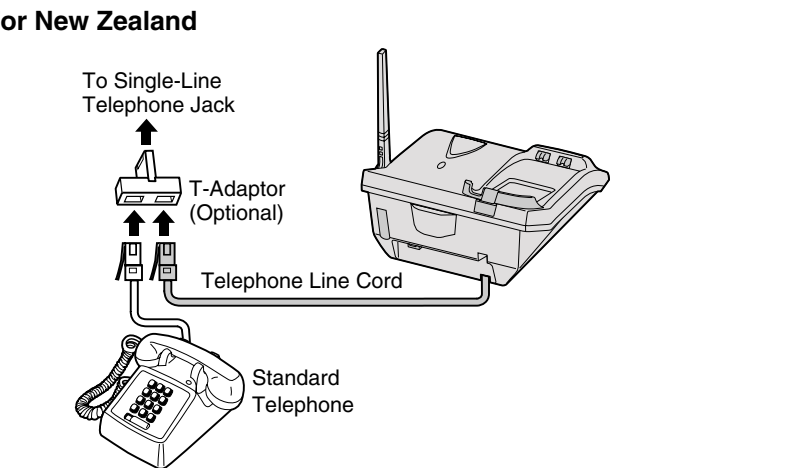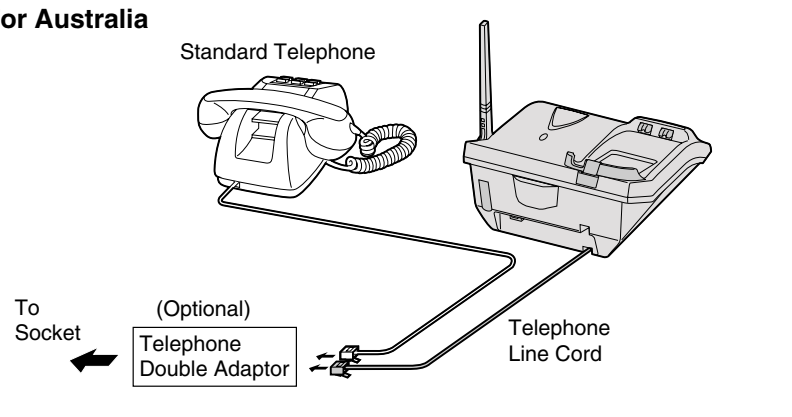


6-E Troubleshooting

Problem	Cause & Remedy
The unit does not work.	<ul style="list-style-type: none">•Check the settings (1-C).•Charge the battery fully (6-A).•Clean the charge contacts and charge again (6-A).•Install the battery properly (6-B).•Place the handset on the base unit and unplug the AC adaptor to reset. Plug in, and try again.•Re-install the battery and place the handset on the base unit. Try again.•KX-TG2501ALS and KX-TG2501NZS are not designed to be used with rotary (pulse dialling) services.
An alarm tone sounds.	<ul style="list-style-type: none">•You are too far from the base unit. Move closer and try again.•Place the handset on the base unit and try again.•Plug in the AC adaptor.•Raise the base unit antenna.
Static, sound cuts in/out, fades. Interference from other electrical units.	<ul style="list-style-type: none">•Locate the handset and the base unit away from other electrical appliances (6-C).•Move closer to the base unit.•Raise the base unit antenna.•Press [CH] to select a clearer channel.
The unit does not ring.	<ul style="list-style-type: none">•The ringer volume is set to OFF. Press [▲] or [▼] while the TALK indicator light is off (2-B).

6-F Wall Mounting

This unit can be mounted on the wall.

- Push the hook and turn it around. Turn the hook until a click is heard.
- Connect the AC adaptor. Tuck the telephone line cord inside the wall mounting adaptor, then push it in the direction of the arrow.
 - The word "UP" should face upward.
- Install screws using the wall template below. Connect the telephone line cord. Mount the unit, then slide down.
 - Raise the antenna.
 - Fasten the telephone line cord to prevent it from being disconnected.
- To charge the handset battery: Fix the charge contacts (①) and insert the hook to the handset hole (②).
 - The IN USE/CHARGE indicator lights.

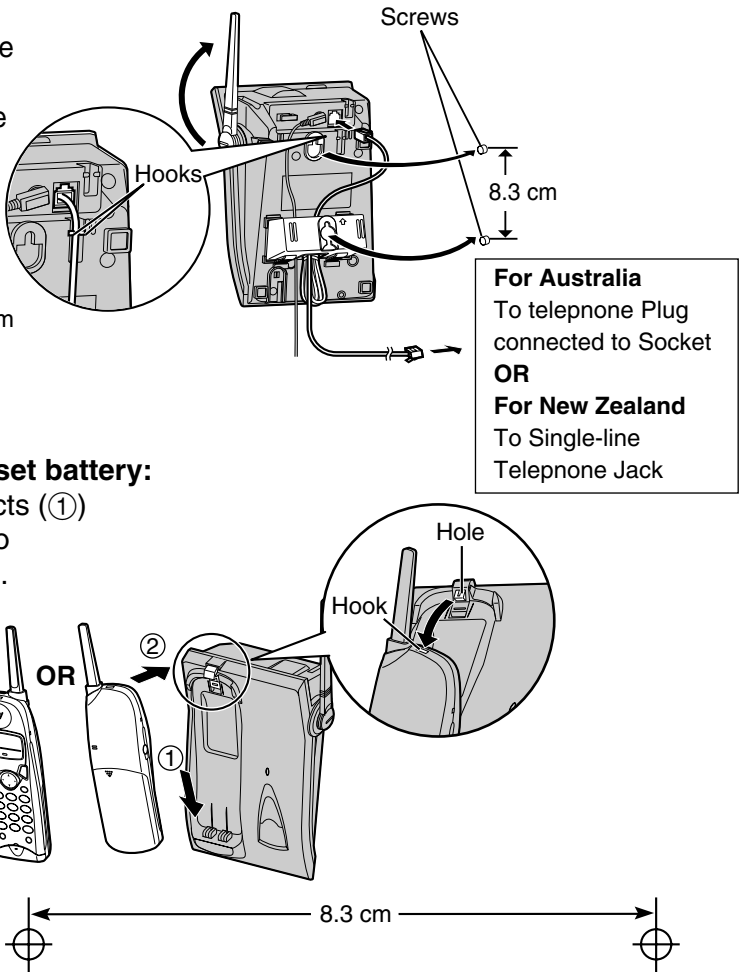

6-G Safety Instructions

Take special care to follow the safety suggestions listed below.

Safety

- The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.
- When left unused for a long period of time, the base unit should be unplugged from the household AC outlet.
- To minimize the possibility of lightning damage when you know that a thunderstorm is coming, we recommend that you:
 - Unplug the telephone line cord from the phone jack.
 - Unplug the power supply cord from the AC power outlet.

Installations

Environment

- Do not use this unit near liquids—for example, near a bathtub, washbowl, sink, etc. Damp environments should also be avoided.
- The unit should be kept away from heat sources such as radiators, kitchen range, etc. It also should not be placed in rooms where the temperature is less than 5°C or greater than 40°C.
- The AC adaptor is used as the main disconnect device, ensure that the AC outlet is located/installed near the unit and is easily accessible.

Placement

- Do not place heavy objects on top of this unit.
- Care should be taken so that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.
- Place the unit on a flat surface.

For best performance

- If noise prevents the conversation from being understood at the handset, approach the base unit to lessen the noise.
- The handset should be used at the HIGH volume setting when the reception audio is difficult to hear.
- The handset should be fully recharged on the base unit when the RECHARGE indicator flashes.
- The handset antenna should not be touched during use because it can effect the handset's performance.
- The maximum calling distance may be shortened when the unit is used in the following places: Near obstacles such as hills, tunnels, undergrounds, near metal objects such as wire fences, etc.

WARNING:
TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO LIQUID OR ANY TYPE OF MOISTURE.

When a failure occurs which results in the internal parts becoming accessible, disconnect AC adaptor immediately and return this unit to the place of purchase or service centre.

If there is any trouble, disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, do not reconnect the unit to the telephone line until the fault has been repaired. If the known working phone does not operate properly, consult your telephone company.

This equipment has been tested and found to comply with AS/NZS 3548: 1995 limits for electromagnetic interference. Any modifications to any part of the system or to any peripherals may void the EMC compliance of the system or the peripherals.

This equipment will be inoperable when mains power fails.

The earcap on the handset is magnetised and may retain metallic objects.

Operating near 2.4GHz electrical appliances may cause interference. Move away from the electrical appliances and/or press the CH (Channel) button.

Medical

Consult the manufacturer of any personal medical devices, such as pacemakers, to determine if they are adequately shielded from external RF (radio frequency) energy. (The unit operates in the frequency range of 2401MHz to 2462MHz, and the power output level can range from 0.001 watts to 0.10 watts.) Do not use the unit in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF (radio frequency) energy.

For New Zealand Users Only

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

WARNING NOTICE:

- No "111" or other calls can be made from this device during a mains power failure.
This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service.
- We recommend that a standard phone which can be used in the case of a power failure be connected to the telephone line at all times.
 - This equipment should not be used under any circumstances which may constitute a nuisance to other Telecom customers.

2.4GHz Cordless Phone
Model No. KX-TG2501ALS
KX-TG2501NZS

Operating Instructions



PLEASE READ BEFORE USE AND SAVE.

Charge the battery for about 6 hours before initial use.

Contents by Section

- Getting Started
- Making/Answering Calls
- Speed Dialler
- One-Touch Dialler
- Special Features
- Things You Should Know

For your future reference

Serial No. _____ Date of purchase _____
(found on the bottom of the unit)

Name and address of dealer _____

Attach or keep original receipt to assist with any repair under warranty.

For New Zealand Customers

Panasonic New Zealand operates a toll free Customer Support Centre.
Please phone 0800 Panasonic (0800 726276) for assistance.